

# SABER APR12-G , APR18-G

## 1. LED on cover are **OFF**

- Make sure you have 110 volt power going to the unit
- Make sure there is no loose or broken wires
- Open cover and verify if LED are inserted in their sockets

If you have POWER to the unit, ballast must be replaced with a new one, part number BST120/240GL7 or BST120/277GL

## 1. Lamp LED is **OFF** but ballast LED is **ON**

- The lamp is FAULTY, -Verify lamp continuity with your OHM meter
  - There are 4 pins at one end of the lamp. Using meter probe on one pin, find the corresponding other. Then check the second pair. A GOOD lamp will have continuity on both circuit. A FAULTY lamp has one or both circuit dead.

If lamp is GOOD, the LED is faulty, but the unit works!

If the lamp is FAULTY, replace the lamp :

- part number LMPRGP120 (12 inches lamp)
- part number LMPRGP180 (18 inches lamp)

**Note: part number is etched on the surface of the lamp, close to ceramic end cap.**