

SANUVAIR® 500

1. Lamp is out and unit is not running

- Make sure you have 120 volt power going to unit.
- Make sure there is no loose or broken wires
- Make sure the door is well shut and that micro switch is making contact. If microswitch not making contact replace with part number MSCSWC9

2. If motor doesn't start but lamp is **ON**

Change the motor: part number MSCMTR1

3. If motor is running but UV lamp is **OFF**

- Verify lamp continuity with your meter
 - There are 4 pins at one end of the lamp. Using meter probe on one pin, find the corresponding other. Then check the second pair. A GOOD lamp will have continuity on both circuit. A FAULTY lamp has one or both circuit dead.
- If lamp is GOOD, replace the ballast: part number part number BST120/240GL
- If the lamp is FAULTY, replace the lamp : part number LMPRGXJ65 or LMPRGJ65 (no odor control)

Note: part number is etched on the surface of the lamp, close to ceramic end cap.