



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS PRODUCT.




Read and follow all instructions contained in this manual before using the product. Failure to comply with these instructions may result in personal injuries or damage to the unit or system.

1. Never expose eyes or skin to ultraviolet light from any source. Therefore, before installing or performing maintenance on the unit or system, **TURN OFF AND DISCONNECT** the unit or system from all power sources (there may be more than one switch to disconnect).
 ⚠ **CAUTION:** Electrical shock may cause personal injuries or possibly death.
2. When installing or performing maintenance on the UV unit or system, it is recommended to wear **safety glasses and gloves**. In order to avoid reduced performance of lamp(s), **do not touch lamp glass without gloves**.
3. UV lamps contain a small quantity of mercury: if a lamp breaks, clean and **dispose of with care**. UV lamps can be disposed/recycled after use, as any other fluorescent lamps. Contact and follow your local and national authorities' specific instructions.
4. Use only specified **SANUVOX branded replacement UV lamps with your unit or system**. Use of any other lamps will void your warranty and can result in damage to the unit, system and/or lamp(s).
5. UV rays may destroy certain types of filters (polymer or plastic); please keep the unit or system light away from shining directly on plastic.

FOR COMPLETE INSTRUCTION MANUAL,
VISIT THE BIOPÜR PAGE ON WWW.SANUVOX.COM

FILTER KIT FOR BIOPÜR

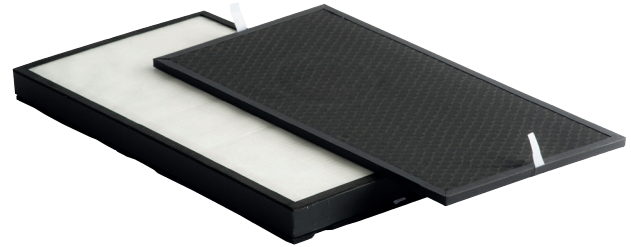

Photos illustrating products are non contractual.

SETUP & INSTALLATION


What you will need

A utility knife and/or a pair of cissors to unpack all components.

⚠ **CAUTION:** Handle your product with care to avoid breaking parts. Make sure you have a free and safe space to unpack, install and setup your product. Confirm you have access to the necessary power source for the product requirements (see unit or system label). If you have any questions regarding the installation instructions, call SANUVOX at 1-888-726-8869.

What's included

A prefilter, a HEPA filter and an activated carbon filter.

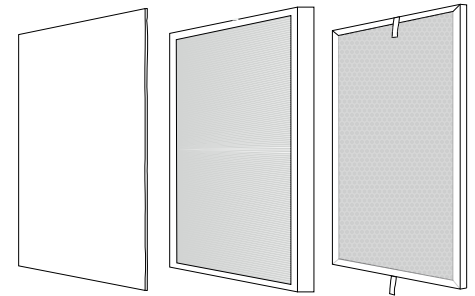

How to Replace Filter Kit

Filter kit should be replaced every 6 months or at least once a year. The TiO₂ catalyst is not included in the filter kit, and therefore should not be replaced. Replacing filter kit on the Biopür is quick and easy. Simply turn off the power source, open unit cover, remove and dispose of old filters, replace with new filter kit, close unit and turn power source back on.

Step by Step Filter Kit Replacement

1. Turn off and unplug your Biopür.

Remove the unit cover: To remove the front cover, grasp the bottom of the unit and pull up and away from the unit. Once detached from the unit, lift the cover upwards.

2. Once the Biopür is open, you will see the locking latch inside the Biopür, at the top. **Twist latch** to allow the filters to be removed. **Remove only the replaceable filters (prefilter, HEPA filter and activated carbon filter) and dispose of them.**

⚠ **CAUTION:** Do not dispose of TiO₂ catalyst.

3. **Prepare new filters.** Remove the contents from packaging, **remove filters from plastic bags** and **place new filters inside the Biopür** in the following order:
 - a. TiO₂ Catalyst
 - b. Activated Carbon Filter
 - c. HEPA Filter
 - d. Prefilter

⚠ **CAUTION:** Never turn your unit on with filters still wrapped. This may cause damage to your unit.

5. Once **new and unwrapped filters** are placed back inside the unit, **turn latch** to keep filters in place.
6. **Securely replace the unit cover:** First fit the top of the unit into place and slowly press the bottom as to allow the bottom clips to catch.

Finally, plug in your Biopür.

**You are now ready to power ON your Biopür again
and keep enjoying great air quality for you and your family.**